

9210 UCOUSTIC CABINET ASSEMBLY INSTRUCTIONS

A BASE x 1

B CASTOR PLATES x 1

C LOAD BEARING CASTORS x 4
(WITH 16 x M6 POZI PAN SCREWS)

D CORNER POSTS x 4
(WITH 16 x M6 POZI PAN SCREWS)

E MOUNTING ANGLES x 4
(WITH 16 x M6 POZI PAN SCREWS)


F M6 POZI PAN SCREWS x 72

G M6 SOCKET BUTTON SCREWS x 32


H 4mm ALLAN KEY x 1

I TOP COVER x 1


1 LOCATE CASTOR PLATES **B** x 4
ONTO BASE **A**

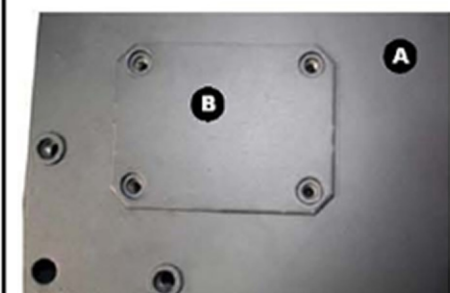

2 SECURE CASTORS **C** x 4 TO EACH
PLATE **B** USING FIXINGS **F** x 4

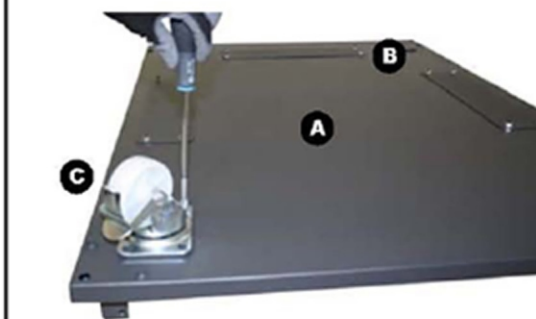

3 POSITION CORNER POSTS **D** ONTO
BASE **A** FIX WITH **G** x 4 USING
ALLAN KEY **H**



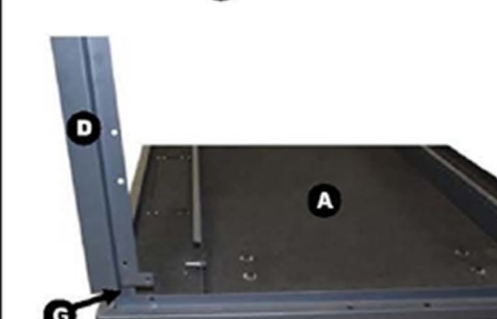


4 FIT TOP COVER **I** ONTO CORNER
POSTS **D** FIXING IN PLACE WITH
FIXINGS **G** USING ALLAN KEY **H**



5 POSITION MOUNTING ANGLES **E** AND FIX INTO PLACE WITH FIXINGS **F**

NB: ENSURE THE DEEPEST PRODUCT IS USED TO GAUGE THE DISTANCE BETWEEN FRONT & REAR MOUNTING ANGLES.
LEAVE A DISTANCE OF 50mm BETWEEN ANY MOUNTED EQUIPMENT AND THE FRONT & REAR DOORS

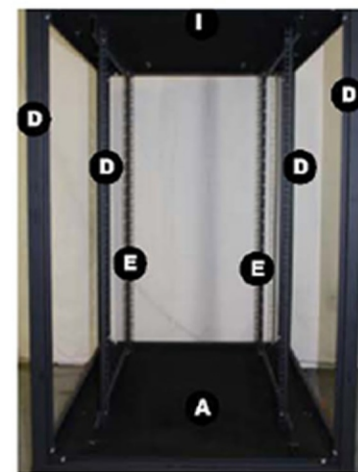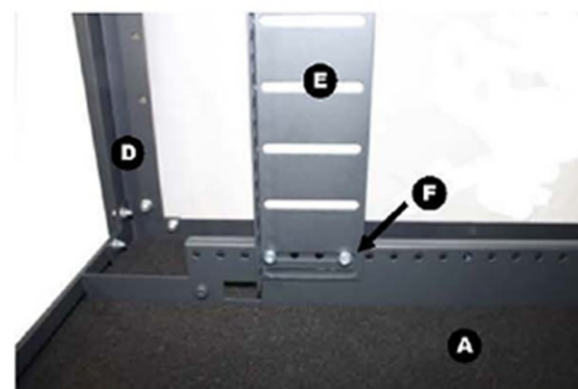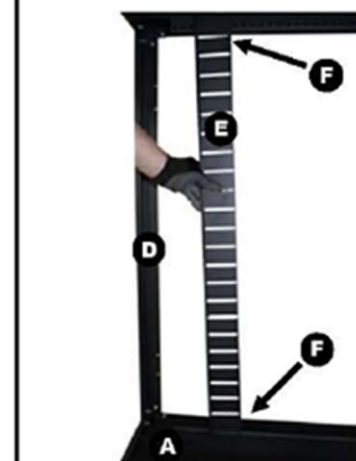

J DEPTH SUPPORT RAILS x 4
(WITH 16 x M6 POZI PAN SCREWS)

K INFILLS x 4
(WITH 24 x M6 POZI PAN SCREWS)

L SIDE PANEL 15mm GASKET FOAM x 8

M FRONT & REAR 10mm GASKET FOAM x 8

N FRONT ANTI-RECIRCULATION KIT x 1 SET
(5 PIECES PER SIDE & 6 PIECES TOP & BOTTOM FRONT)

O SIDE PANELS x 2


P FRONT DOOR LEFT x 1

Q FRONT DOOR RIGHT x 1


R REAR DOOR LEFT x 1

S REAR DOOR RIGHT x 1

6 FIX DEPTH SUPPORT RAILS **J** x 4 TO BOTH CABINET SIDES (TOP & BOTTOM) USING **G** x 4

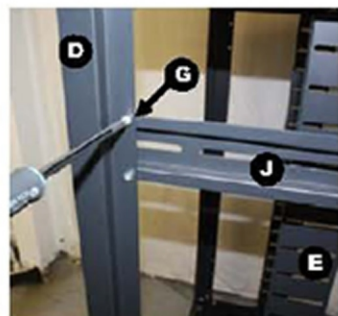

7 FIT INFILL PANELS **K** PARALLEL TO MOUNTING ANGLES SO THEY RUN FLUSH WITH THEM. FIX TO DEPTH SUPPORT RAILS USING **F** x 4

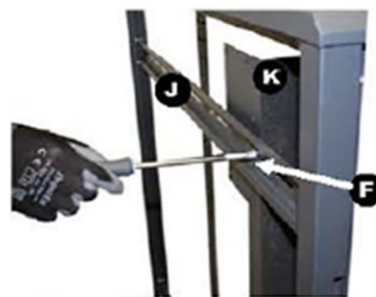

8 FIT GASKET FOAM **L** AND **M** TO THE COMPLETE SIDES, FRONT AND REAR OF CABINET



NB: ENSURE GASKET ISN'T STRETCHED AND IS 'THIMBED' INTO PLACE AS YOU GO ALONG REMEMBER THAT THE 15mm GASKET IS FOR THE SIDES AND THE 10mm FOR THE FRONT & REAR

9 FIT ANTI-RECIRCULATION KIT **N** TO THE SIDE & FRONT FASCIAS, ENSURING THERE ARE NO GAPS



10 FIT SIDE PANELS **O** ONTO LOCATION PINS ON BASE. FIT FRONT & REAR DOORS **R** & **S** ONTO HINGES

